

INSTALLATION INSTRUCTIONS

www.roughcountry.com Phone: (800) 222-7023

2019 – C RAM 1500 CREW CAB / RCD1980CC

HARDWARE DESCRIPTION	QTY.
HWKT-00031X	
M8 – 1.25 HX FLANGED NUT	18

PARTS INCLUDED	QTY
DRIVER SIDE	1
PASSENGER SIDE	1



Step 1: Locate the driver side step rail.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items


Step 2: Starting with the driver side, remove any steps and old hardware from the vehicle.



Step 3: On the inside rocker panel there will be three-attachment point consisting of three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



Step 4: An additional person is recommended for this step. Carefully install the Hoop step to the three factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.

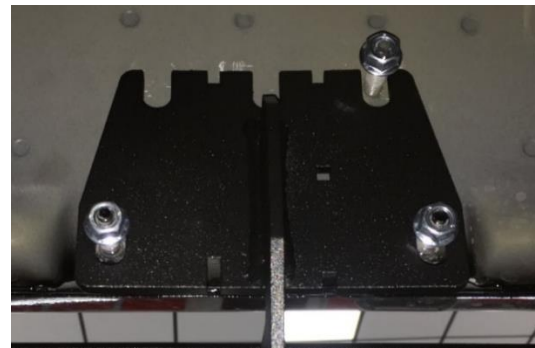

Step 5: Next, adjust the Hoop step level with the body of the cab and tighten all hardware 30 ft. /lbs.



Step 6: Re-peat steps 3-5 for passenger side.